

Sur Ron Controller Upgrade

User Manual



ASI BAC Sur Ron Kit Contents



BAC2000 / BAC4000



Plug and Play Harness




NXT Display



Controller Bracket



Motor Extension Block

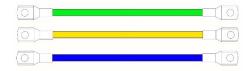

Motor Extension Cables



Regen Throttle

Installation

Disconnect Power




Uninstall factory controller

You must uninstall the factory controller first by removing the bash guard and other various parts. Once you unbolt the factory controller from the Sur Ron then you can begin installation on the ASI BAC controller.

Installation 2 Motor Extension Cables




Use the supplied motor extension cables to extend the leads on Sur Ron motor. You will need to use the terminal block, stack and fasten the motor extension lugs to it. Make sure to color match the extension cables with the corresponding cable from the motor.

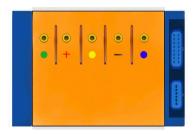


Fasten the motor extension lugs to the controller. Green, Yellow, and Blue are correspond to each motor cable, be sure to color match them

Now fasten the red and black cable lug from the Sur Ron to the controller.

Installation 3

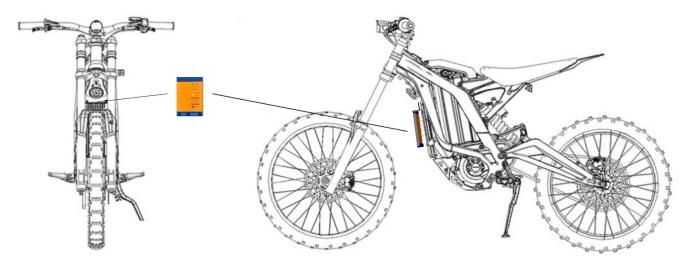



The controller mounting bracket is provided to allow for a clean and easy installation. You will be using the two bolts from your Sur Ron's tilt sensor to fasten the BAC controller, and the controller mounting bracket to the frame. The controller heatsink should be facing outward.

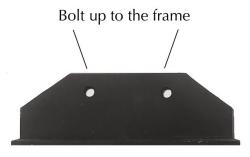


Controller Mount Bracket

Once the controller has been mounted. Plug in the Molex connectors to the ASI Controller and route them up into the frame, they will connect to their mating connectors on the Sur Ron

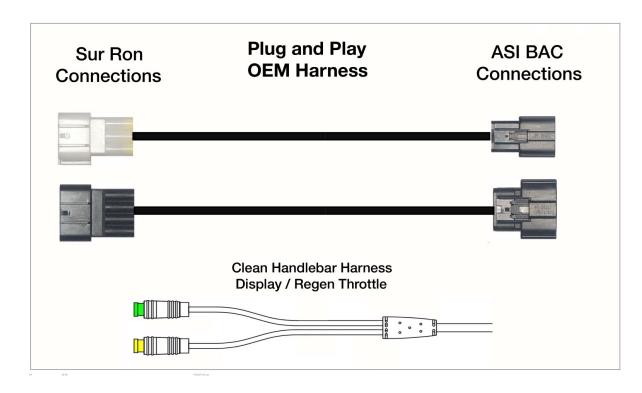

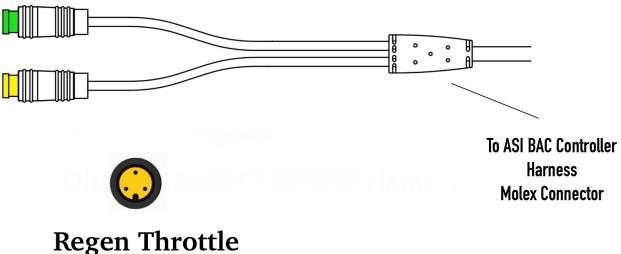

Regen Throttle

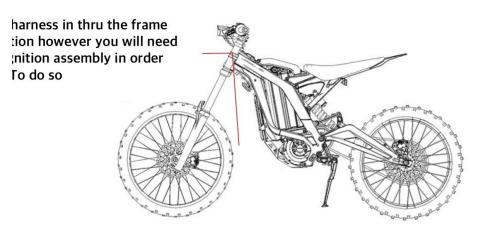

rness has been routed to the handlebars, now you can install the splay Unit, and regen throttle. They will connect to their own ding connectors on the harness.

Accessory Installation on Handlebar



Display



The ERT ASI BAC Kit uses the NXT display for visual information, tuning, and even diagnostics.

Although your BAC controller is already preconfigured and ready to run.

The NXT display can be used to setup the BAC in the event that the motor does not run, misconfigured, or if there is an issue preventing the system from running properly.